



Installation Manual STILLNESS LINEAR TILE INSERT

Please follow these steps:

1. Trim the bottom tray 3mm shorter than the intended length to accommodate the installation of end caps.




2. Trim the top tray 1mm shorter than the bottom tray to facilitate a smooth insertion of the top tray for a neat and snug fit.

3. Utilize an appropriately sized hole saw for your pop waste and bore the hole in the necessary location to match up with the floor waste pipe along the surrounding framework and fit it to the wall cavity.

4. Place the end caps into the bottom tray and fasten them in position by applying a layer of silicone adhesive to the tray's exterior.

5. Run a line of silicone adhesive around the pop waste's rim and affix it beneath the bottom tray where you drilled the hole.

Exploded Breakdown View:

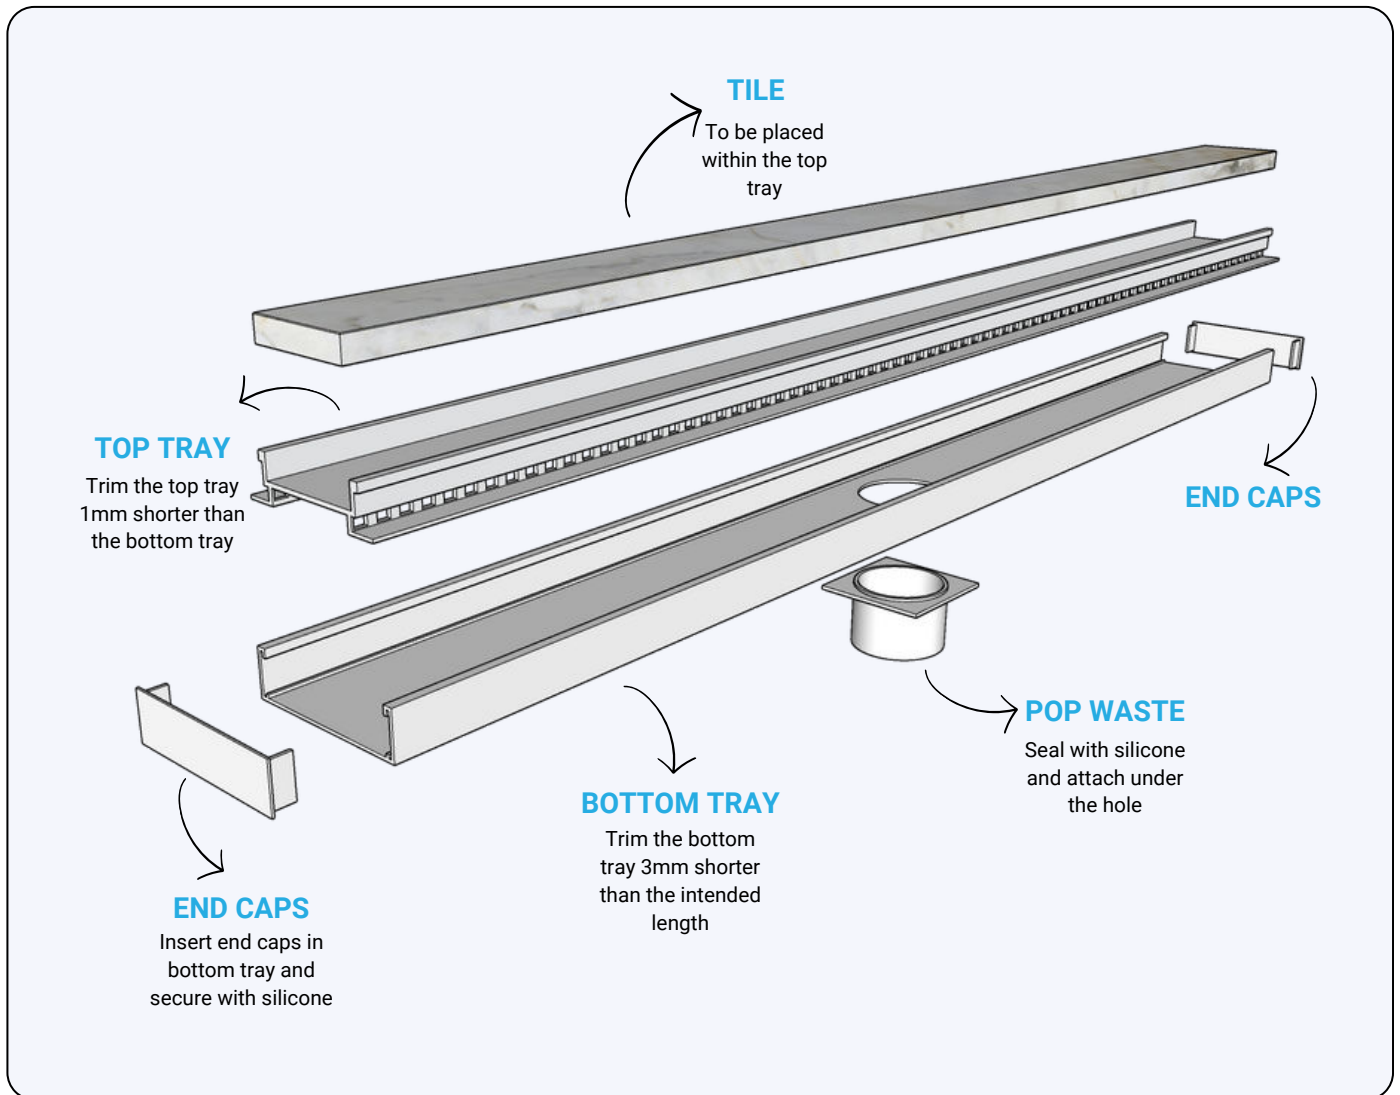

Important Note: Please note that this guide provides general installation instructions, but there are various factors that may necessitate adjustments to the installation method.