



Installation Manual - SHOWER NICHE

IMPORTANT: *DO NOT* use solvent based adhesives with this product.


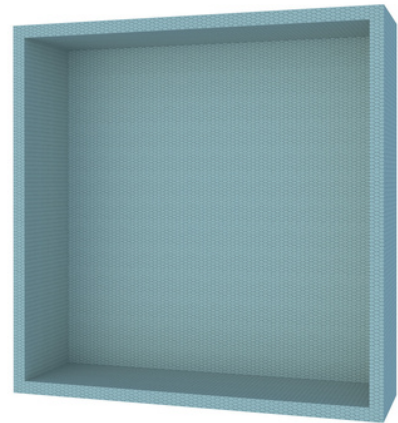


Please follow these steps:


1. Ensure that both the work area and the framing surface are free from dust for optimal adhesion.
2. Assemble the niche by folding it and bonding with a non-solvent based adhesive.

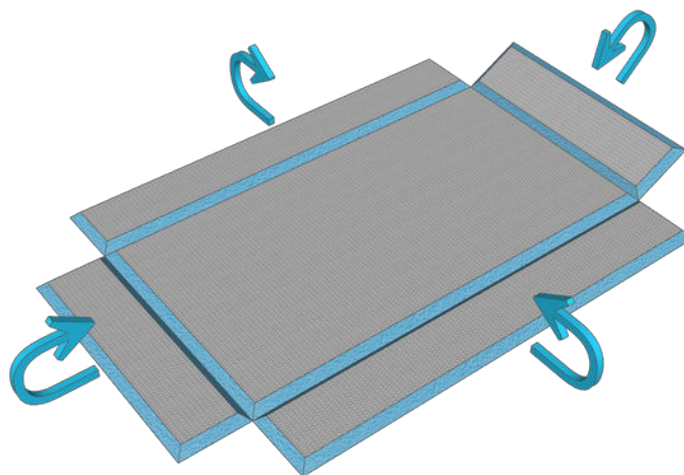

3. Spread a continuous bead of a non-solvent based adhesive along the surrounding framework and fit it to the wall cavity.

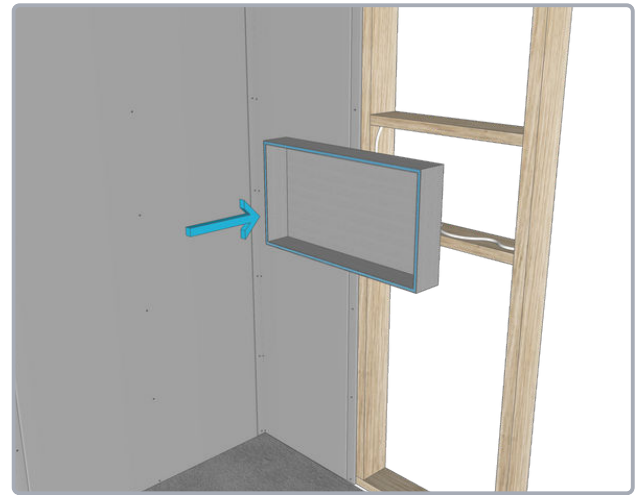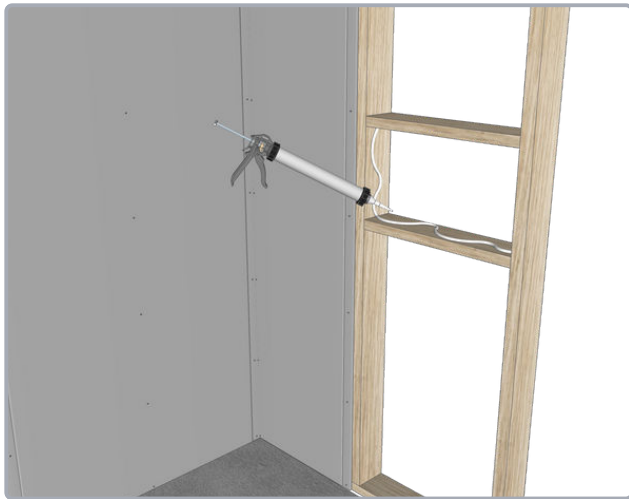

4. Ensure the niche is aligned with precision, and double-check that it is completely level. If needed, secure it in place with screws.

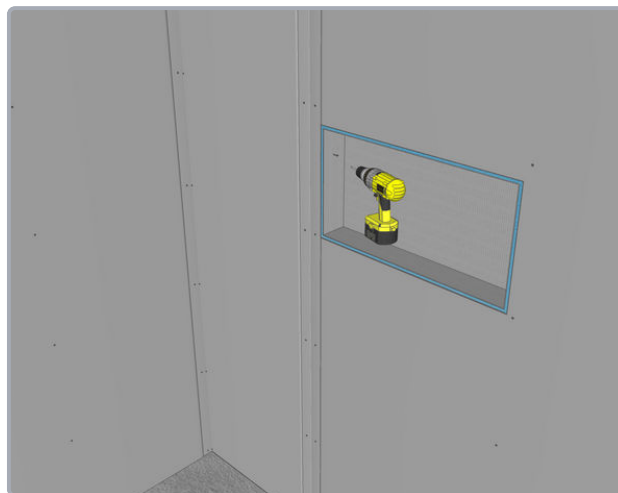

5. After waterproofing has been applied, it's ready for tiling.

Important Note: Please note that this guide provides general installation instructions, but there are various factors that may necessitate adjustments to the installation method.